 


ASSEMBLY INSTRUCTIONS


Adjust up set (CUT8/1)

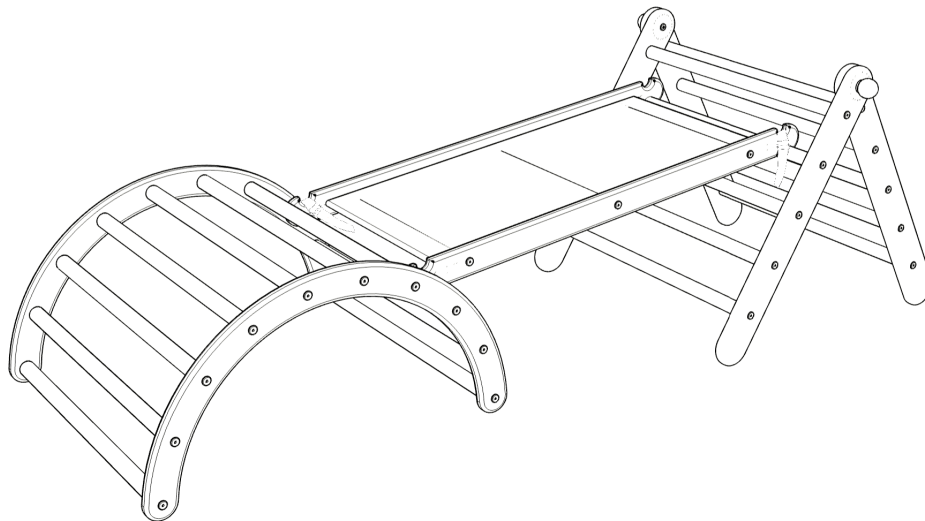


Manufacturer:
SIA "AINARS CINKUSS"
Parka iela 2, Jaungulbene,
Gulbenes nov., LV-4420
54103035051

- Not suitable for children under 3 years
- 50kg max (only one child at a time)
- This toy can only be used under parental supervision
- Warning: For domestic use only




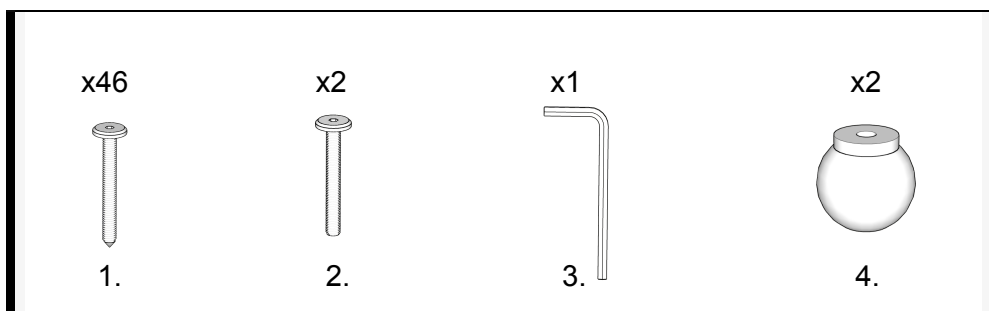




Chicken ladder slide

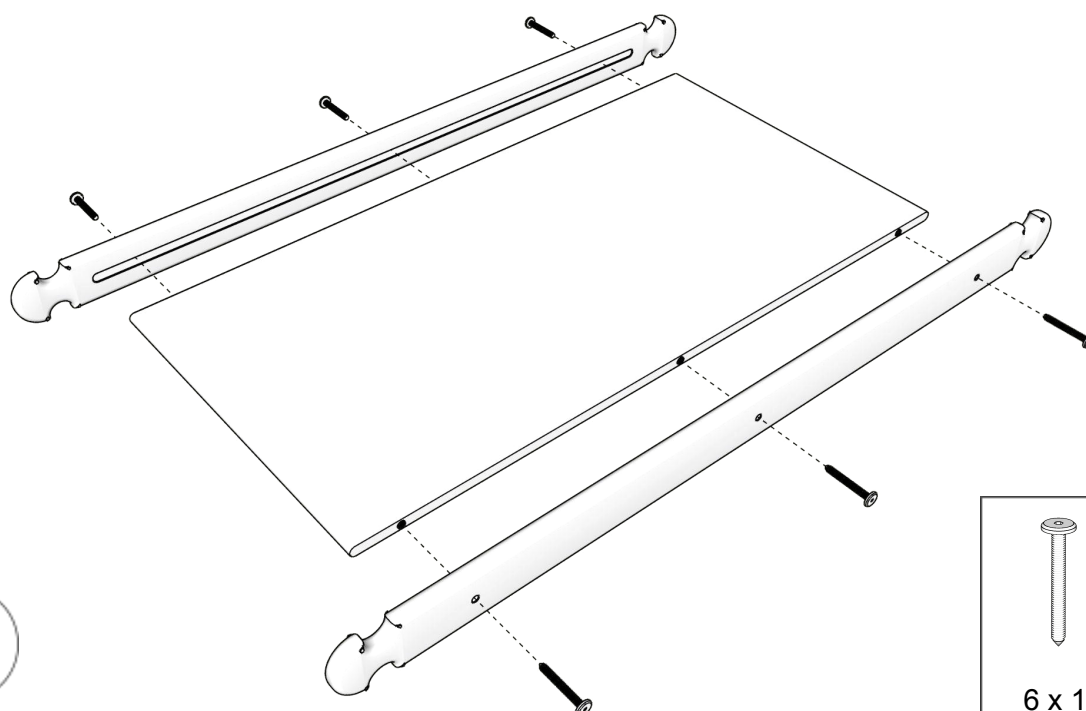



S-Arch

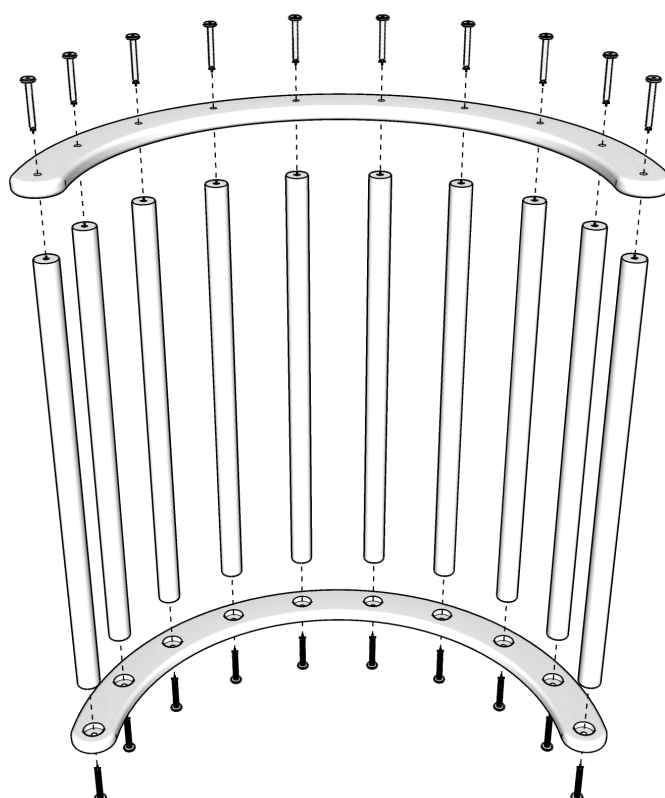

Adjust up triangle

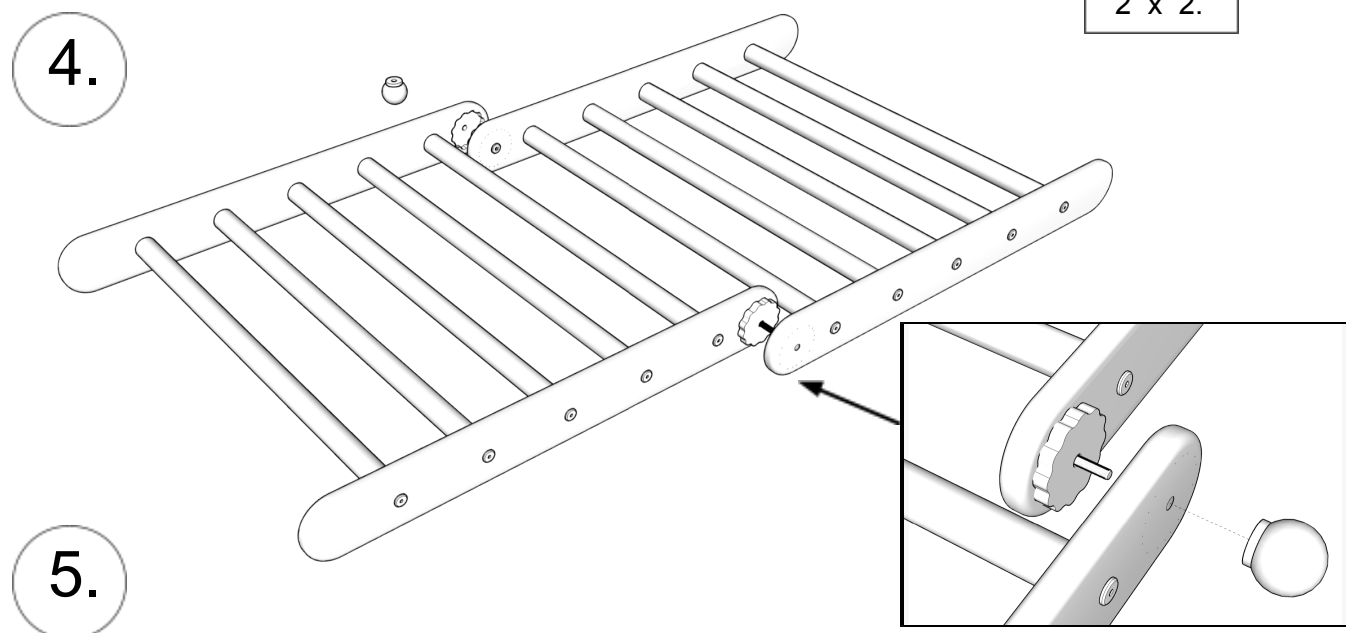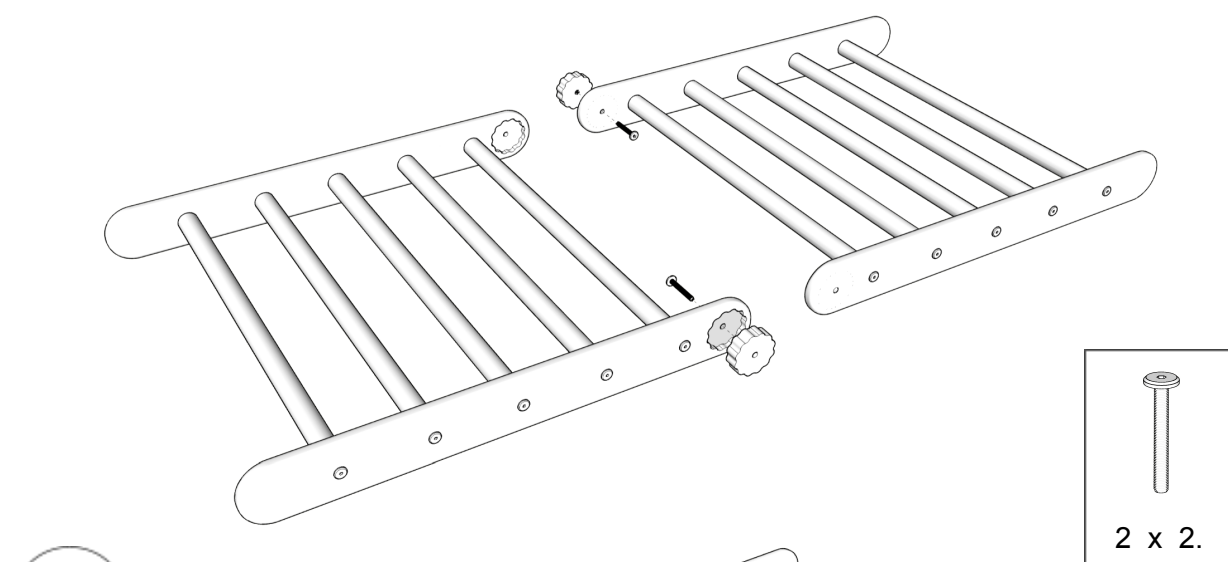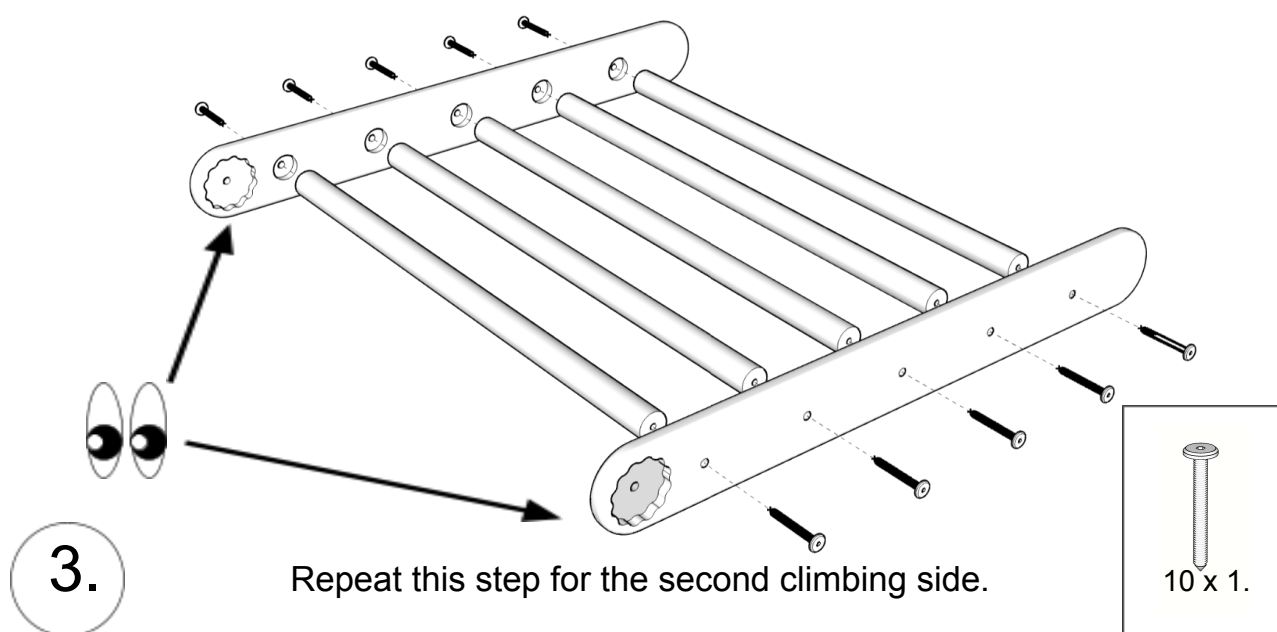


6.

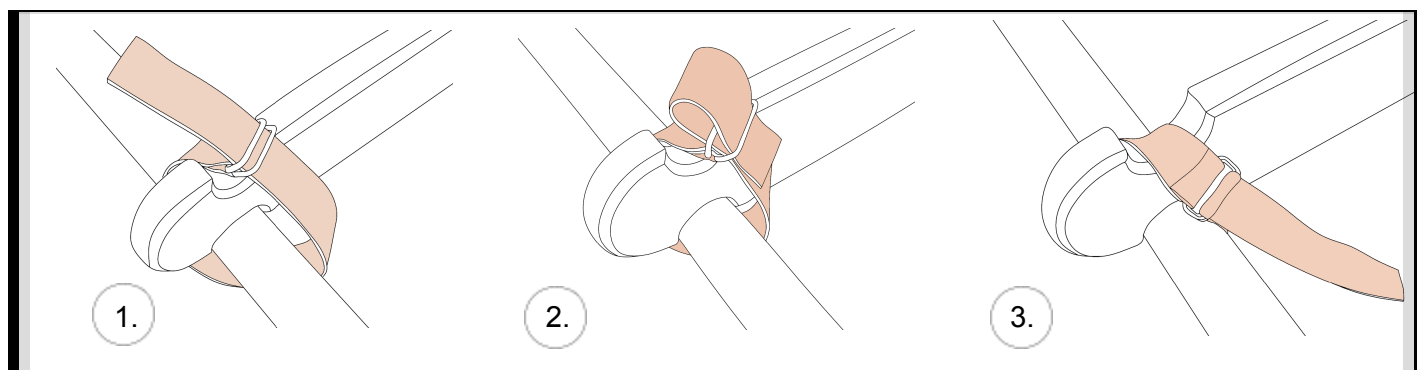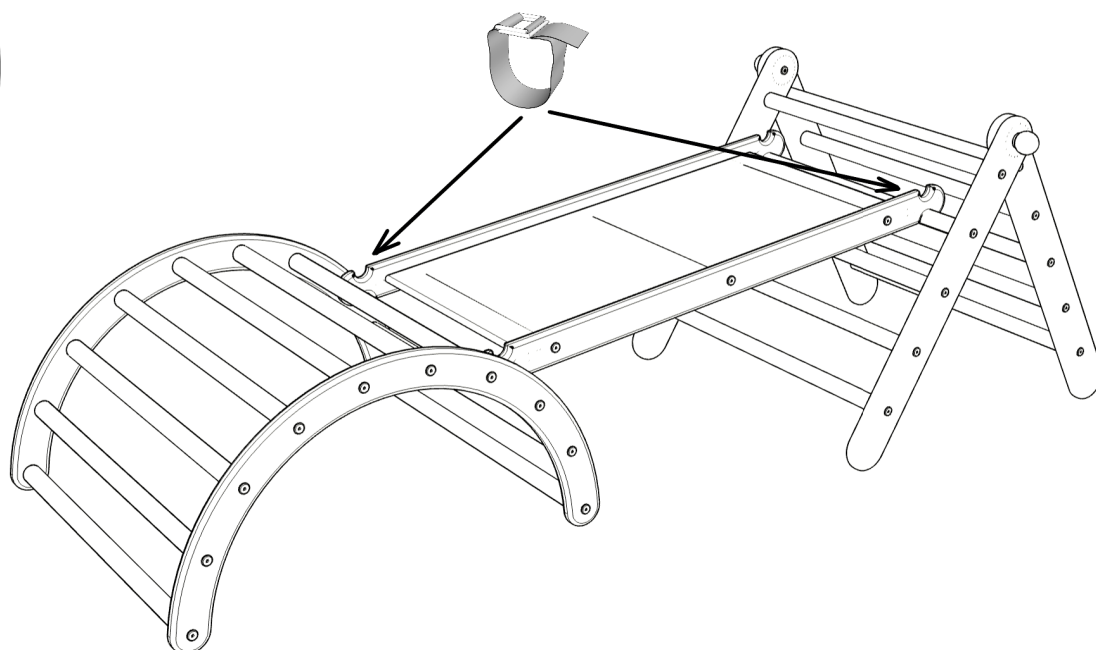



Set of Adjust up triangle, chicken ladder slide and s-arch is now complete. Make sure that all screws and bolts are tightened.

To change the height of adjust up triangle:

- 1) untighten both wooden knobs for around 1,2cm
- 2) push one side out of the gears
- 3) adjust height of the triangle
- 4) push sides back together and tighten the wooden knobs.

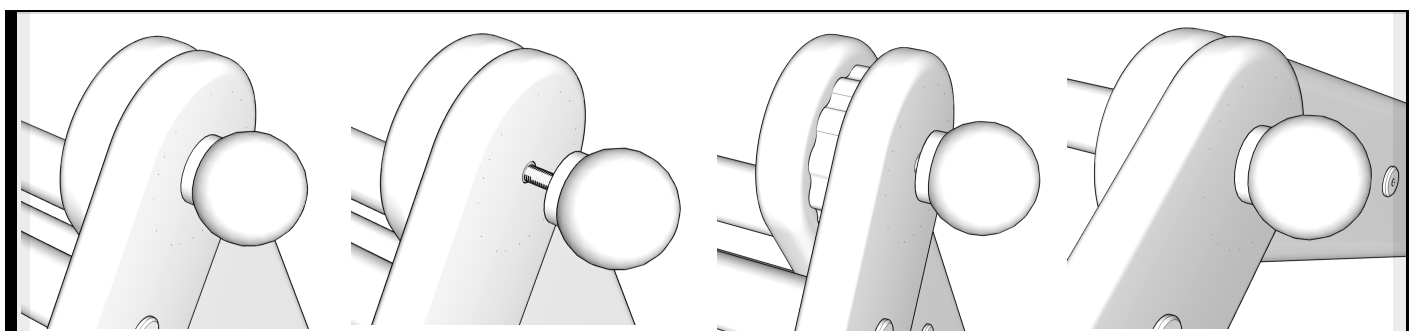

Here are 2 positions how to use Adjust up triangle, Chicken ladder slide and S-arch

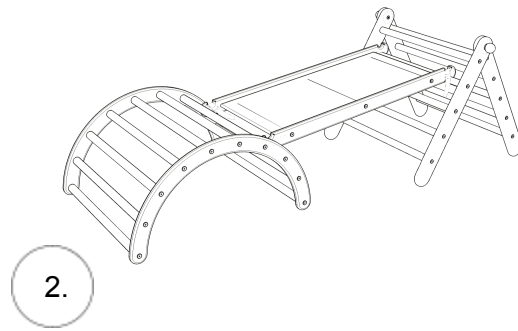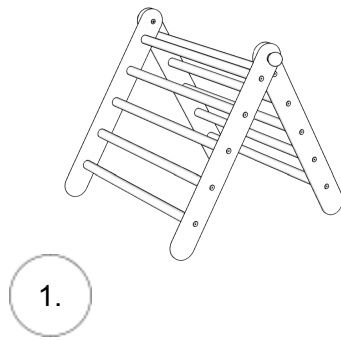

- Warning: For domestic use only
- This toy can only be used under parental supervision
- Not suitable for children under 3 years
- 50kg max (only one child at a time)
- This set is meant to be used in the two positions shown in the pictures above
- Before every use make sure that all screws and bolts are tightened



In case of stability
issues, scan this
code!